

# Quick User Guide V640

## 1. Connection

The V640 Desktop Station owns 2 redundant RJ45 ports at the rear side. Please refer to figure 1.



Figure 2

For normal operation just connect a network cable to one of the RJ45 ports. It doesn't matter to which one. Please refer to figure 2.

**Do not use both ports without authorization of your network administrator:**



Figure 1

## 2. Startup

After proper cable connection the Desktop Station will initiate the boot process.

**Note: PoE (IEEE standard 802.3af) and connection to the VIPCOS system is mandatory.**

Via this connection the unit will be integrated in your pre-configured VIPCOS network automatically followed by a self test of the keys. All keys are switched on and off consecutively.

As soon as a text appears on the display, the station is ready for use:  
(<10 Seconds)



Example Display Text

## 3. Destination Test

Once the boot process is complete, the station will test the network and preconfigured destinations. If a destination cannot be reached, the station indicates this via continuous illumination of the corresponding destination button:



In this case please contact the network administrator or Vonamic GmbH Germany.

## 4. Direct- and Groupcalls

The keys are assigned direct or group calls.

To establish a speech connection, press and hold the desired single or group call button for the duration of the call:

9	10	11	12	13	14	15	16
GR 1	GR 250	GR ALL	Dyn. GR Speech	Dyn. GR On/Off	Vol./ Default	Vol./ -	Vol./ +
1	2	3	4	5	6	7	8
V615 1100	UP0 1101	UP0 1102	V615 1103	V615 1104	V615 1105	V670 1106	V670 1107

Note: The recommended distance between microphone and user is approx. 5 cm.

# Quick User Guide V640

